

Part No. M10478-A2

**Product Specification** 

# **Applications**

- Personal Navigation Devices (PNDs)
- Portable Media Players (PMPs)
- Personal Digital Assistants (PDAs)


#### **Features**

- Easy to use, low cost single package GPS RF antenna module
- Mediatek MT3337 chip
- Ultra small SMT package; 13.8 x 9.5 x 1.8mm
- Low current consumption <200uA required for Periodic mode.
- Novel external matching ensure easy tuning for each platform
- AIC, Active Interference Cancellation for anti Jamming.
- EPO (Extended Prediction Orbit), up to 30day orbit prediction, Warm TTF = <5sec</li>

#### · Medical / eHealth

- Smart Watches
- Asset Tracking / Personal Safety

# **Functional Block Diagram**

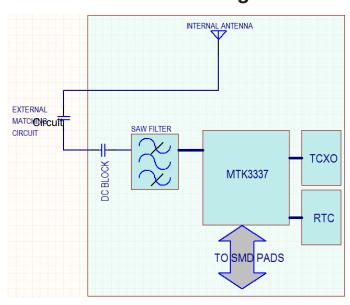

Antenova M2M's GPS RADIONOVA® M10478-A2 antenna module is an ultra compact single package solution that combines full GPS receiver and antenna on the same module. The M10478-A2 is a highly

# **Description**

Antenova M2M's GPS RADIONOVA® M10478-A2 antenna module is an ultra compact single package solution that combines full GPS receiver and antenna on the same module. The M10478-A2 is a highly integrated GPS RF antenna module suitable for L1-band GPS systems. The device is based on the Mediatek MT3337 GPS architecture combined with Antenova's antenna technology. Using patented external matching means this module is suitable from small watch applications to large tracker devices.


All front-end and receiver components are contained in a single package laminate base module, providing a complete GPS receiver for optimum performance. The M10478-A2 operates on a versatile 2.8V-4.2V supply with low power consumption and several low power modes for further power savings. An accurate 0.5ppm TXCO ensures short TTFF. Indoor and outdoor multi-path detection and compensation. Support multi-GNSS incl. QZSS, SBAS ranging.

# Package Style

SMD Castellated pads enable SMT placement and re flow as well as hand soldering.

13.8 x 9.5 x 1.8mm RF Antenna Module



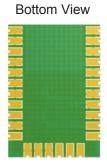

# **Absolute Maximum Ratings**

Symbol	Parameter	Min	Max	Unit
V <sub>cc</sub>	Main Supply Voltage	-0.3	4.3	V
V <sub>IO</sub>	Supply voltage I/O ring	-0.3	3.6	V
$V_{BATT}$	VBCKP Supply	-0.3	4.3	V
RF <sub>IN</sub>	Maximum RF Input Power	N/A	+10	dBm
T <sub>STG</sub>	Storage Temperature	-40	+85	°C
T A	Operating Temperature	-40	+85	°C

<sup>\*</sup> Exposure to absolute ratings may adversely affect reliability and may cause permanent damage.

# **Recommended Operating Conditions**

Symbol	Parameter	Min	Тур	Max	Unit
V <sub>cc</sub>	Main Supply Voltage	2.8	3.3	4.3	V
V <sub>BATT</sub>	VBCKP Supply	2.8	3.3	4.3	V
T <sub>OP</sub>	Operating Temperature	-40	-+85°C		

# **DC Electrical Characteristics**

Conditions:  $V_{CC}$  = 3.3V,  $T_{OP}$  = 25 °C

Symbol	Parameter	Тур	Unit
CC(PK)	Peak Acquisition Current	31	mA
I <sub>CC(AVG)</sub>	Average Tracking Supply Current	24	mA
CC(STBY)	Standby (Sleep) Power Supply Mode	<200	μΑ
CC(BCKUP)	Backup Mode	<200	μΑ

# **RF Specifications**

Conditions:  $V_{CC} = 3.3V$ ,  $T_{CP} = 25$ °C, Freq = 1575.420MHz

Symbol	Parameter	Тур	Unit
NF <sub>LNA</sub>	LNA Noise Figure	2	dB
ANT <sub>RL</sub>	Antenna Return Loss	-15	dB
ANT <sub>BW</sub>	Antenna Bandwidth at -10dB return loss	30	MHz
ANT <sub>EFF</sub>	Antenna Total Efficiency	>40%	%
ANT <sub>EFF_RHCP</sub>	Antenna RHCP Efficiency	>30%	%



Part No. M10478-A2

Frequency	Standard	Тур*	Unit
698-798	LTE700	43	dB
824-849	Cellular CDMA	43	dB
869-894	GSM850	43	dB
880-915	GSM900	43	dB
1710-1785	GSM1800/DCS	44	dB
1850-1910	GSM1900/PCS	46	dB
1920-1980	WCDMA	46	dB
2400-2492	WLAN, BT and WiMAX	50	dB
2500-2690	LTE2600	52	dB

<sup>\*</sup>Does not include antenna rejection.

# **Mechanical Specifications**

Parameter	Тур	Unit
Module exterior dimensions (L x W x H)	13.8 (+0.1/-0.1) x 9.5 (+0.1 / -0.1) x 1.8 (+0.2 / - 0.0)	mm
Module support and connection	Suface mounted (SMD)	-
Module mass	<1	g



Part No. M10478-A2

# **System Specifications**

Communication	Specification
Data Output Protocol	NMEA 0183
Host Interfaces	UART
Default data rate on UART	4800/9600/38400/115200 bps
GPS Engine	
Chip	MTK MT3337 Chip
Channels	66 Acquisition Channels
TCXO	0.5ppm
Accuracy	
Horizontal Position Accuracy	<2.5m CEP
Maximum Position Update Rate	5 Hz
Sensitivity	
Acquisition (Cold)	-148dBm
Acquisition (Hot)	-163dBm
Tracking	-165dBm
TTFF	
Hot Start	<1s
Warm Start	<25s (typical)
Cold Start	<35s (typical)
General	
Maximum Altitude	<18.000 km
Maximum Speed	<514 m/s
Active Interference Cancellers	12 multi tone active cancellers
	ISSCC2011 award
Additional Features	SBAS, WAAS, EGNOS, QRZZ, GAGAN Support
EPO	Orbit prediction
500/ CED Open Sky 24hr Statio 120dPm good view of	

50% CEP, Open-Sky, 24hr Static, -130dBm, good view of the sky

# antenova® M 2 M Pin out Description

# GPS RADIONOVA® RF Antenna Module


Part No. M10478-A2

# Table shows the designation and function of each pin on the M10478-A2 module. Please note that several pins have multiple functions.

Pin	Designator	Description
1	GND	Ground connection
2	GND	Ground connection
3	GND	Ground connection
4	ANT_OUT	RF from internal antenna to external matching circuit
5	GND	Ground connection
6	ANT_IN	RF from external matching circuit back into module
7	GND	Ground connection
8	VCC	Main DC supply, +2.8 to +4.2V
9	GND	Ground connection
10	HRST	System reset, active low
	TM	1PPS Tim Mark Out
12	VBCKUP	Backup supply +2.0V to 4.2V
13	EINT2/GIO14	Hardware Baud rate select
14	EINT3/GIO15	Hardware Baud rate select
15	GND	Ground connection
16	GND	Ground connection
17	GND	Ground connection
18	FIXED INDICATOR	Indicates once a GPS fix has been obtained.
19	GND	Ground connection
20	TX	UART Transmit data line
21	RX	UART Receive data line
22	GND	Ground connection
23	GND	Ground connection
24	GND	Ground connection
25	GND	Ground connection
26	HW_STANDBY	Used to enable standby mode. If not used leave floating.
27	GND	Ground connection
28	GND	Ground connection



Part No. M10478-A2

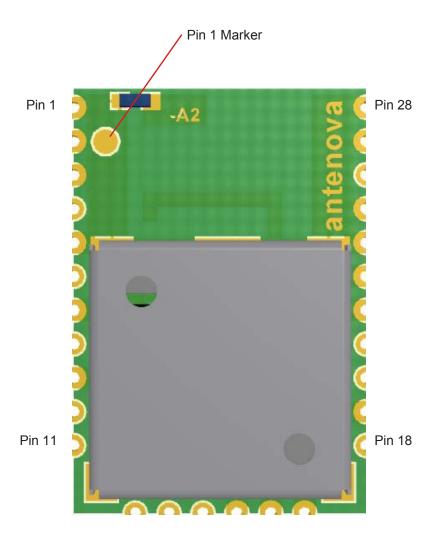




# Application Schematic Example for M10478: UART - 9600 Baud

The circuit below shows a basic design for use with the UART interface and configuring the default baud rate to 9600.

Baud Rate = 9600 (Hardware configured)

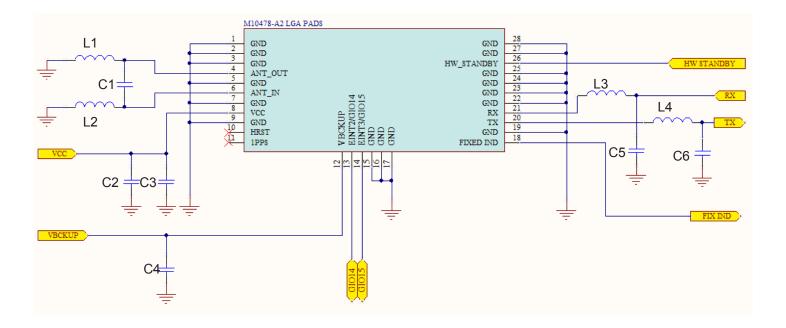

# **Bill of Material**

Designator	Value	Description/Comments	Quantity
C1, L1, L2	TBD	Depending on device antenna matching circuit	TBD
C3, C4, C5, C6	22pF capacitor	Decoupling capacitor. Place close to corresponding pin	4
C2	2.2uF capacitor	Decoupling capacitor. Place close to corresponding pin	1
L3, L4	47nH Inductor	Filter component to suppress any potential host PCB noise	2



Part No. M10478-A2

#### Host Baud Rate/Protocol Selection

The modules default baud rate is user configurable at start-up with a hardware configuration. This is limited to the values in the following table.

The baud rate and output protocol can be changed dynamically after start up using the relevant commands. Please contact Antenova for more information about protocol messages.

#### Hardware Baud Rate Selection Table

Baud Rate	Pin13 (GIO)	Pin 14 (GIO)
9600	NC	NC
115200	NC	PD
4800	PD	NC
38400	PD	PD

NC = Not connected. Leave floating PD = Pull down resistor to GND (10K  $\Omega$ )

#### **Host Interface Overview**

#### **UART Interface**

The UART converts bytes of data to and from asynchronous start -stop bit streams as binary electrical impulses. The port contains a 16-byte FIFO, and 256 bytes of URAM. The bit rates are selectable from 4800, 9600, 38400 and 115200 bps.

The IO level from the UART port are CMOS compatible, however for RS"£" compatibility the use of external level shifters will be required. The hardware configuration of the port baud can be changed dynamically by the use of commands. These will be active and saved as long as the VBACKP supply is applied.

The default protocol is determined by hardware configuration.



Part No. M10478-A2

# **Power Supply**

The M10478-A2 uses two DC supply inputs. VBCKUP to power the RAM and RTC sections of the reciever, and VCC to power the digital and processing sections. VBCKUP is to be applied all the time to keep these sections alive. VCC can be removed to initiate a backup power save mode (See page 9). VBCKUP can be removed if a battery is also used at VBCKUP to maintain this supply. The supply is internally regulated for 2.8V meaning the external supply is versatile for a range of voltage levels.

# TM (1PPS)

TM is a one pulse per second output from the receiver providing uses for timing purposes.

# **HRST (Hardware Reset Pin)**

The External reset pin is default high by an internal 75Kohm and should be left floating if not used. To initiate a reset The pin needs to be pulled low. The module also initiates a reset if the VCC drops below the minimum 2.8V supply.



Part No. M10478-A2

### **Power Management**

The M10478-A2 has three power saving modes.

- Standby mode
- Back up mode
- Periodic mode

#### Standby Mode

Standby mode is a power saving mode that shuts down the RF section of the module and puts the processor into a standby mode. The RTC is kept alive and the RAM power is maintained to keep the module configuration. The standby state can be initiated either with a hardware signal to Pin26 or by using a command.

#### Hardware controlled Standby:

Enable standby mode by a low state to pin 26 (HW\_STANDBY). To wake the module back to full power a high state Needs to be applied to pin 26. If Pin 26 is not to be used then it must be kept floating (not connected).

**Standby mode command:**Software on the host needs to send the "PMTK161 command through the UART interface.


Command	M10478-A2 standby then wakeup	Current consumption (Typ)
\$PMTK161,0*28	M10478-A2 enters standby mode	<200uA
Any byte	M10478-A2 wakes up from standby mode	

#### Back up mode

To enter backup mode the VCC simply needs to be removed. Once initiated the RTC and all configuration is saved along with any ephemeris data to allow quick TTFF once the VCC is re-applied. VBACKUP needs to be applied at all times for backup mode to run correctly.

#### Periodic mode

Periodic mode is a module controlled mode that reduces current consumption by only waking the module for short periods to maintain fix data. The periodic state is user configured. Contact Antenova for more information and a user command manual.

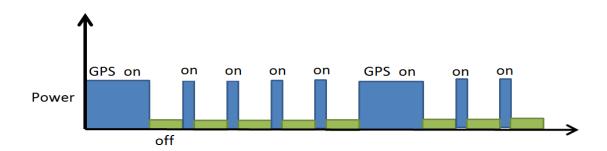

PMTK225 setting	M10478-A2 time off/awake	Current usage (Typ)
PMTK225, 2,3000,18000,72000	Module sleeps for 12secs, then wakes for 3secs periodiclly. 72000 is for a cold boot condition.	<200uA



Part No. M10478-A2

# **EPO (Extended Prediction Orbit) data service**

The EPO allows the use of up to a 30-day orbit predictions that can be used to aid the module for an instant fix solution

- A proxy server on the customers side to update EPO files from the MTK server daily.
- Application software to access the proxy server through the internet (optional if host device can access internet
- Software on host device to send EPO data to M10478-A2 module to allow instant fix by using EE data.

Please contact Antenova for more information. Requires permission from MTK to use service.

# **AIC (Active Interference Cancellation)**

The AIC feature provides effective narrow-band interference and jamming elimination. The GPS signal can be recovered from the jammed signal and allows users to obtain better navigation quality. This can be beneficial since Many of today's devices have more and more functionality with regards to transmitters with many on-board antenna's

# **External Matching**


The M10478-A2 module uses a matching circuit on the host PCB in order to fine-tune the on-board antenna to each specific application. This "external matching" allows compensating for the detuning of the antenna caused by various different components that can be close to the M10478-A2 module in the actual application (plastic case, battery, speakers etc).

The external matching must be placed on the host PCB between ANT\_OUT (PIN3) and ANT\_IN (PIN1). Although 2 components are typically more than enough to match the antenna to the  $50\Omega$  impedance required, a  $\sqcap$ -network topology with 3 components is recommended for safe proving.


#### **Schematic**

Both low-pass and hi-pass topologies for the matching network can be used with similar results. As the same footprint can be used for both topologies, the exact type and value of the components used can be determined during the optimization phase.

- The initial values can be simply chosen as the null-circuit (no impedance matching):
  - Hi-pass:
    - C1 = 18pF
    - L1, L2 = Not Fitted

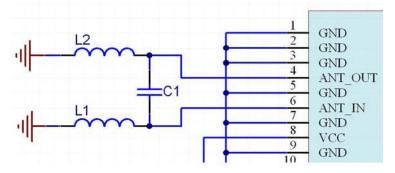

- · Low-pass:
  - L1 = Jumper (0Ω resistor)
  - C1, C2 = Not Fitted

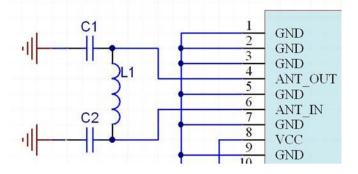



#### **Type of Matching Components**

- Capacitors:
  - Use 0402, COG components
- Inductors:
  - High-Q, wire wound inductors in 0402 size are recommended for maximum performance, e.g. Murata LQW15 series
  - Good quality multi-layer type inductors (e.g. Murata LQG15 series) can also be used as a lower cost alternative

#### **Matching Procedure**

The types and values of the matching components must be chosen so that the impedance seen by port ANT\_IN (PIN4) is as close as possible as  $50\Omega$ . Although it is a relatively simple operation, it requires some RF skills and a VNA (Vector Network Analyzer). Please contact an Antenova M2M FAE to get support on defining the optimal matching for your specific device.

#### **External Antenna Support**


A low cost external circuit can be used to provide external antenna support. Please contact Antenova for more information, and example circuit.

#### **PCB Matching Circuit Layout**

The layout of the external matching circuit should be done using the following guidelines:

- · Minimize the length of the tracks connecting the ANT OUT and ANT IN pads to the matching
- · Minimize the length of the tracks between the components
- · Use a solid groundplane under the matching circuit area
- Absolutely avoid routing any track under the matching circuit area
- Connect the top ground layer with the ground layer underneath using several vias

Layout drawings (Gerber or other format) are available from Antenova. Please contact your local FAE.

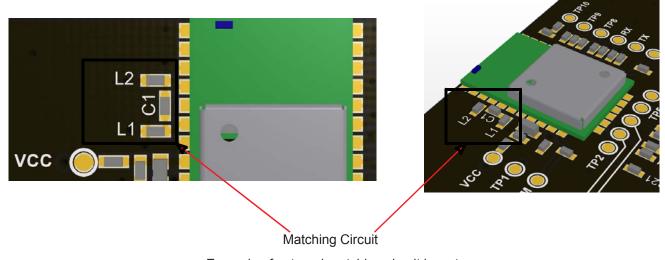


Example of external matching circuit layout

Part No. M10478-A2

#### **Internal Antenna Clearance**

The M10478-A2 module internal antenna requires a small clearance on the host PCB to operate. The clearance means that no Ground or tracks of any kind are allowed to be within this area. This must also be clear through the entire PCB stack up. The minimum area needed clear is 6mm X 4.87mm.


#### Top view of M10478 Footprint

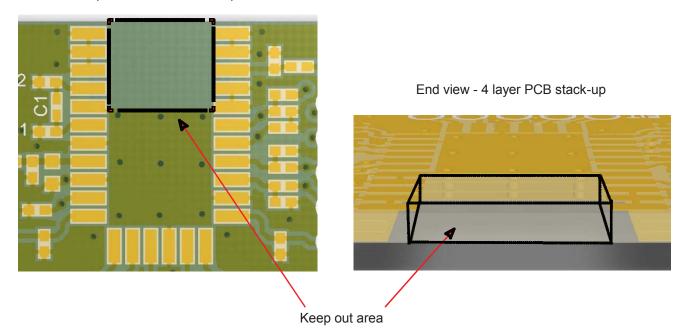

Part No. M10478-A2

# **Typical RF Antenna Module Placement**

Note: Module placement locations and orientations are critical for achieving optimal system performance. It is strongly recommended to contact Antenova M2M for design recommendations. Below is the placement shown on the Antenova evaluation PCB.

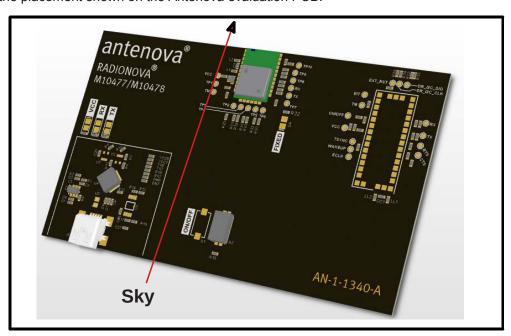





**Back View** 




**Side View** 




# **Typical Antenna Matching Results**

Typical antenna matching as seen by ANT\_IN (Pin 3) is shown in the following plot. The matching bandwidth at -10dB is typically 30MHz. Measured on M10478-U1 test board.

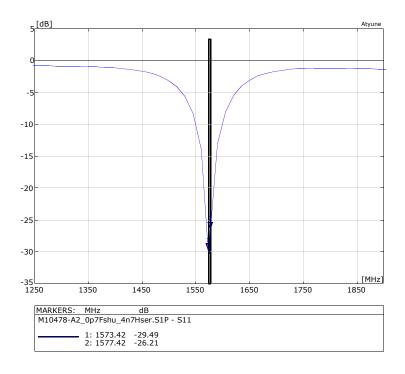


Typical antenna return loss after matching

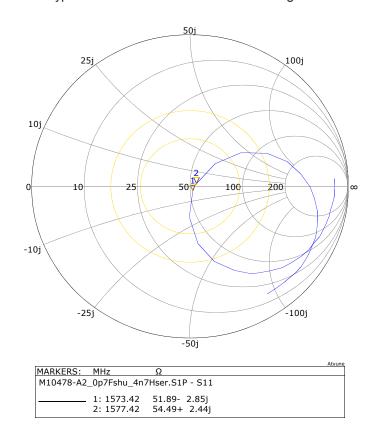


# **Front-end Rejection**

The figure below shows the rejection for the input SAW filter before the RF input, including the effect of pads, tracks and decoupling. The plot can be useful to calculate the isolation required from adjacent transmitters in order to avoid the saturation of the LNA.

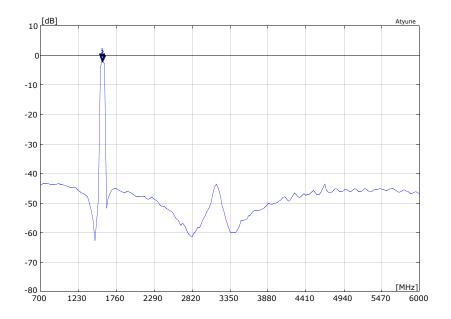

Input SAW Rejection - Wideband

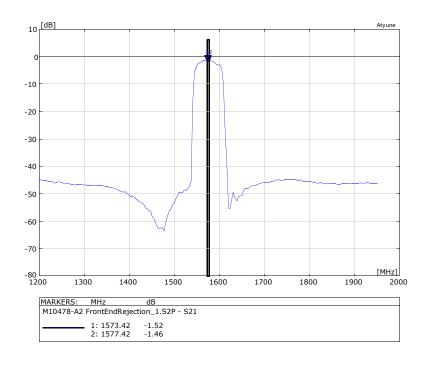


Input SAW Rejection - Narrowband


#### **Module Placement Guidelines**

Due to the internal antenna, care must be taken when defining the placement of the module on the host PCB. Here are some guidelines that should be used when deciding the position of the module.

- The module top edge must be placed almost level with the edge of the host PCB
- The edge of the host PCB that the module is to be placed at must be a minimum of 40mm in length.

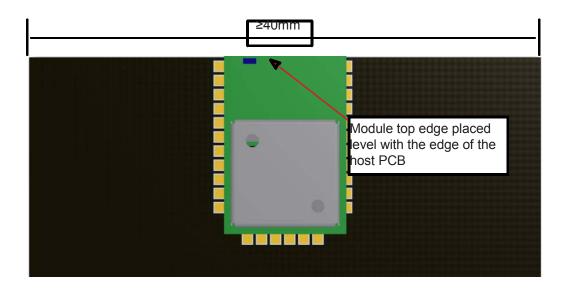

- The central placement of the module is advised. However, an offset placement is also possible.
- For an offset closer to the PCB edge to the right side of the module, a minimum of 10mm distance is required to the edge of the host PCB.

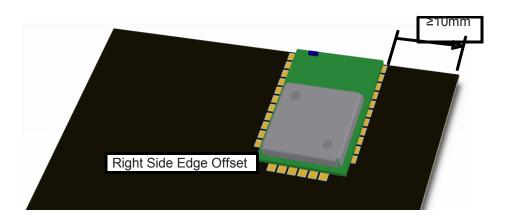


• For an offset closer to the PCB edge on the left side of the module, a minimum of 15mm distance is required to the edge of the host PCB. This additional distance is due to the matching circuit placement.






• For an offset closer to the PCB edge to the left side of the module, a minimum of 15mm distance is required to the edge of the host PCB. This additional distance is due to the matching circuit placement.

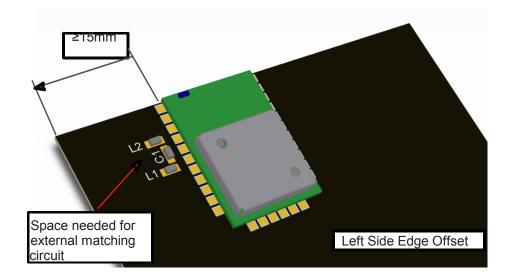

- The antenna uses the host PCB ground to effectively radiate. As such, a GND plane must be placed on the host PCB on at least one layer.
- In the example below, the only area void of GND is the antenna keep-out area.

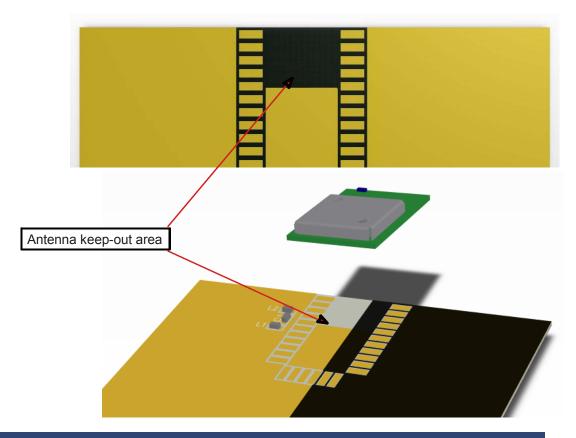


Antennas for Wireless M2M Applications



Part No. M10478-A2

- An ideal stack-up for a host PCB would be to use the top and bottom layers as GND planes, while
  using the internal layers for any signal and power planes. This not only helps the GPS antenna to
  perform effectively, but also helps to reduce any potential noise issues that can be associated with
  mixed signal PCB's.
- An exaggerated example below shows a 4 layer host PCB, GND flooding all available space not used by signals or components.

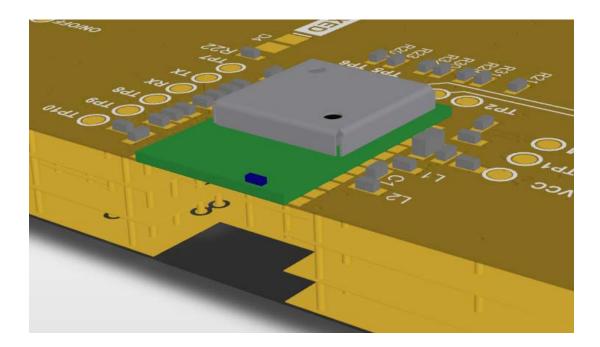


Please contact Antenova M2M for advice on placement.


# **Module Footprint**

Below is the recommended footprint for the module. This footprint allows hand soldering.

- All pads are 0.7mm x 2mm
- Pitch is 1.1mm

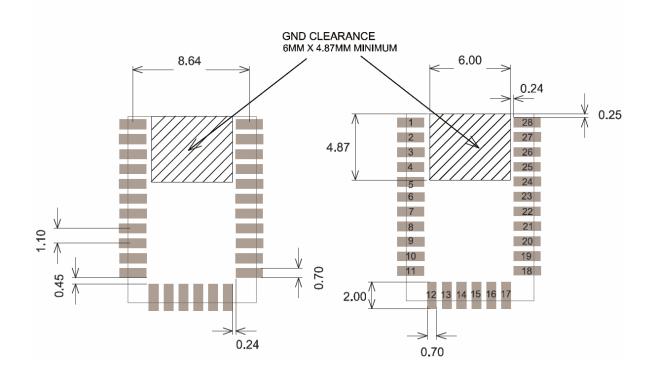

# **Mechanical Drawing**

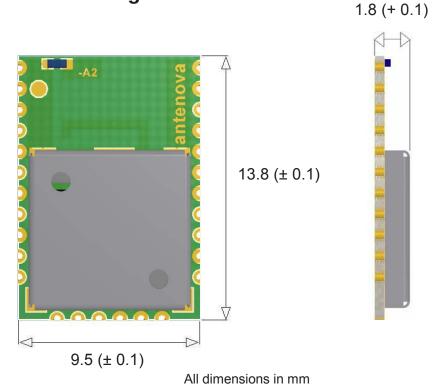

GPS RADION
Part No. M10478-A2

#### **Placement**

antenova®

**Reflow Soldering** 

Typical placement systems used for any BGA/LGA package are acceptable. Recommended nozzle diameter for placement: 5mm


#### **Soldering Paste**

Use of "No Clean" soldering paste is strongly recommended, as it does not require cleaning after the soldering process has taken place. An example of suitable soldering paste is Alpha OM350.

#### Soldering

The recommended soldering profile for M10478-A2 is shown below. However, it is the responsibility of the Contract Manufacturer to determine the exact reflow profile used, taking into consideration the parameters of the host PCB, solder paste used, etc.

Profile Feature	Pb-Free Solder	
	Temperature (T₅) Min	130°C
Pre-Heat	Temperature (T <sub>s</sub> ) Max	220°C
,	Time (t <sub>s</sub> )	<150s
Reflow	Liquidus Temperature - (T <sub>I</sub> )	220°C
	Time (tį )	45-90s
Peak Package Body Temperature (Tp)		245°C
Time within 5°C of peak temp (t <sub>p</sub> )30s		
Average Ramp up rate - T <sub>s</sub> (max) to (T <sub>p</sub> )3°C/s		
Ramp Down Rate		6°C/s max

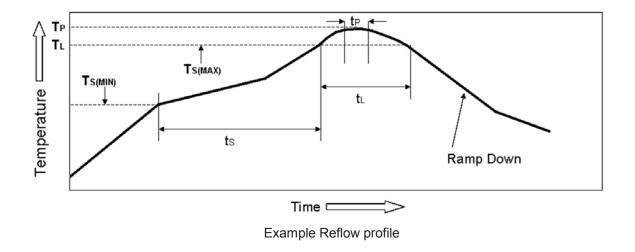

The Pb Free Process-Package Peak Reflow Temperature is 260°C.

Exceeding the maximum soldering temperature could permanently damage the module.

Part No. M10478

#### **Multiple Soldering**

The M10478-A2 module can be submitted up to 2 reflow soldering processes.

Upside-down soldering is acceptable but it is recommended that the Contract Manufacturer qualify the process before mass production. The second reflow must take place within the recommended floor life limit (MSL3). Please contact Antenova for further information.

#### **Hand Soldering**

Hand-soldering and rework of the M10478-A2 module is acceptable, however care must be taken to avoid short circuits due to the small size of the module pads.



# **Quality and Environmental Specifications**

Test	Standard	Parameters
PCB Inspection	IPC-6012B, Class 2. Qualification and Performance Specification for Rigid Printed Boards - Jan 2007	
Assembly Inspection	IPC-A-610-D, Class 2 "Acceptability of electronic assemblies"	
Temperature Range	ETSI EN 300 019-2-7 specification T 7.3	-30 °C, +25 °C, +85 °C, operating
Damp Heat	ETSI EN 300 019-2-7 specification T 7.3	+70 °C, 80% RH, 96 hrs, non- operating
Thermal Shock	ETSI EN 300 019-2-7 specification T 7.3 E	-40 °C +85 °C, 200 cycles
Vibration	ISO16750-3	Random vibration, 10~1000Hz, 27.8m/s², 8hrs/axis, X, Y, Z 8hrs for each 3 axis non-operating
Shock	ISO16750-3	Half-sinusoidal 50g, 6ms, 10time/face, ±X, ±Y and ±Z non-operating
Free Fall	ISO16750-3	1m height, 2 drops on opposite side
ESD Sensitivity	JEDEC, JESD22-A114 ESD Sensitivity Testing Human Body Model (HBM). Class 2	+2000V - Human hand assembly
	JEDEC, JESD22-A115 ESD Sensitivity Testing Machine Model (MM), Class B	+200V - Machine automatic final assembly
Shear	IEC 60068-2-21, Test Ue3: Shear	Force of 5N applied to the side of the PCB
Moisture/Reflow Sensitivity	IPC/JEDEC J-STD-020D.1	MSL3
Storage (Dry Pack)	IPC/JEDEC J-STD-033C	MSL3
Solderability	EN/IEC 60068-2-58 Test Td	More than 90% of the electrode should be covered by solder. Solder temperature 245 °C ± 5 °C

Moisture Sensitivity

Antenova ships all devices dry packed in tape on reel with desiccant and moisture level indicator sealed in an airtight package. If on receiving the goods the moisture indicator is pink in color or a puncture of the airtight seal packaging is observed, then follow J-STD-033 "Handling and Use of Moisture/Reflow Sensitive Surface Mount Devices".

#### Storage (Out of Bag)

The M10478-A2 modules meet MSL Level 3 of the JEDEC specification J-STD-020D - 168 hours Floor Life (out of bag) ≤30 °C/60% RH. If the stated floor life expires prior to reflow process then follow J-STD-033 "Handling and Use of Moisture/Reflow Sensitive Surface Mount Devices".




# Hazardous material regulation conformance

The RF antenna module meets RoHS requirements.

# **Packaging**

**Tape Characteristics** 

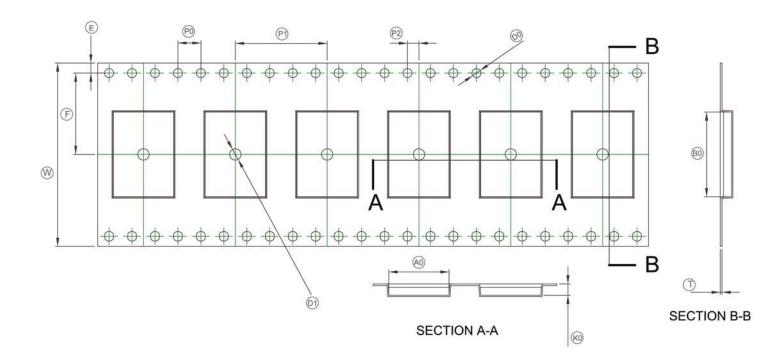


WFEP0P	1P2				
32.00±0.3	14.20±0.1	1.75±0.2	4.00±0.1	16±0.1	2.00±0.1
D0	B0	T	K0	A0	D1

Dimensions in mm

Quantity	Leading Space	Trailing Space
1000 pcs / reel	50 blank module holders	50 blank module holders



Part No. M10478-A2

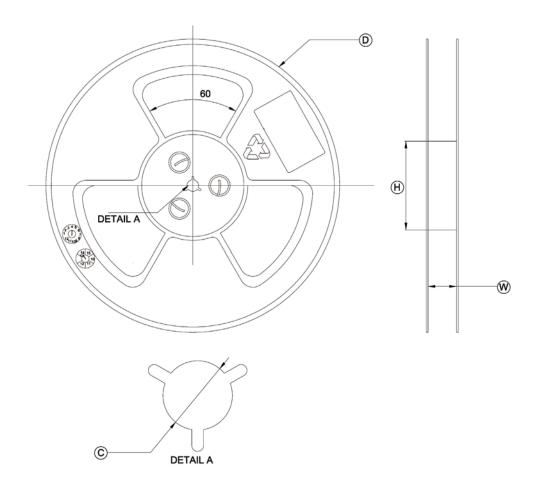

Width	Reel Diameter	Hub Diameter	Shaft Diameter
(W)	(D)	(H)	(C)
32.0mm	330.0±2mm	100.0mm	13.0+0.2/-0.0mm



www.antenova-m2m.com

#### **Corporate Headquarters**

#### Antenova Ltd.

Far Field House Albert Road Stow-cum-Quy Cambridge, CB25 9AR UK

Tel: +44 (0) 1223 810600 Fax: +44 (0) 1223 810650 Email: sales@antenova-m2m.com

#### **USA Headquarters**

#### Antenova USA

Rogers Business Park 2541 Technology Drive, Suite 403 Elgin, IL 60124 USA

Tel: +1 (847) 551-9710 Fax: +1 (847) 551-9719 Email: sales@antenova-m2m.com

#### **Asia Headquarters**

#### Antenova Asia Ltd.

4F, No. 324, Sec. 1, Nei-Hu Road Nei-Hu District Taipei 11493 Taiwan, ROC

Tel: +886 (0) 2 8797 8630 Fax: +886 (0) 2 8797 6890 Email: sales@antenova-m2m.com

Copyright® 2013 Antenova Ltd. All Rights Reserved. Antenova®, Antenova M2M, RADIONOVA® and the Antenova and Antenova M2M logos are trademarks and/or registered trademarks of Antenova Ltd. Any other names and/or trademarks belong to their respective companies.

The materials provided herein are believed to be reliable and correct at the time of print. Antenova does not warrant the accuracy or completeness of the information, text, graphics or other items contained within these information. Antenova further assumes no responsibility for the use of this information, and all such information shall be entirely at the user's risk.



Antennas for Wireless M2M Applictions